

A photograph of several MEKAR air handling units (AHUs) in a row. The units are light green with stainless steel interiors and are mounted on a white base. A large, semi-transparent circular graphic with a stylized leaf logo is overlaid in the center. The text 'MEKAR' is in a large, bold, white font, and 'AIR HANDLING UNITS' is in a smaller, white font below it.


**MEKAR**<sup>®</sup>  
AIR HANDLING UNITS

Software Installation

1. Choose a category and download the dedicated software.




2. After completing the previous step, install the downloaded file following the procedure. The following window will open. To complete the bar, press Finish.

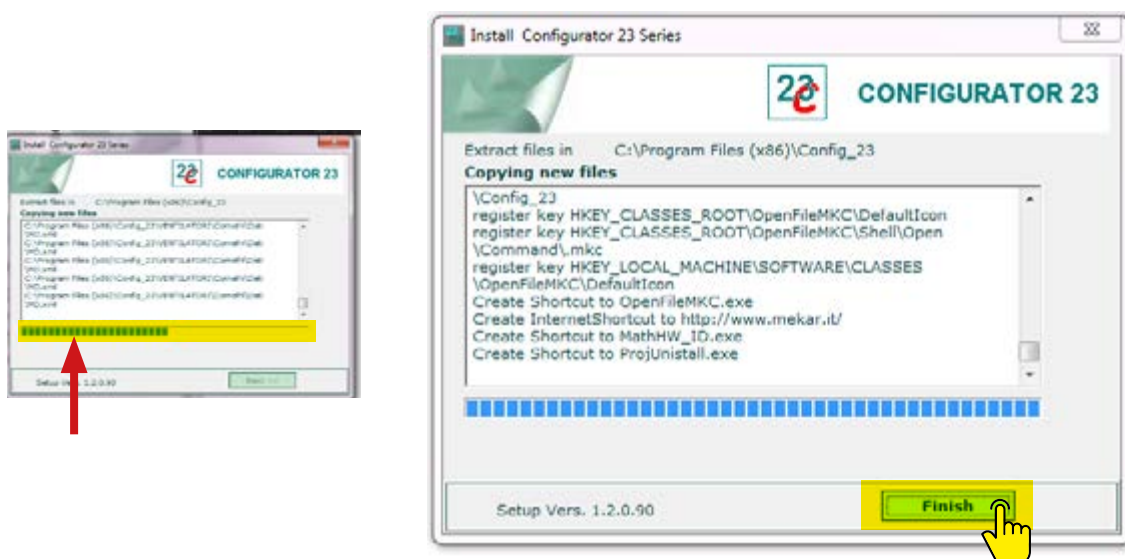


3. When installation is complete, go to the start menu of windows > programs > (folder) **Configurator 23** > click on the item


“Require Activation code” .

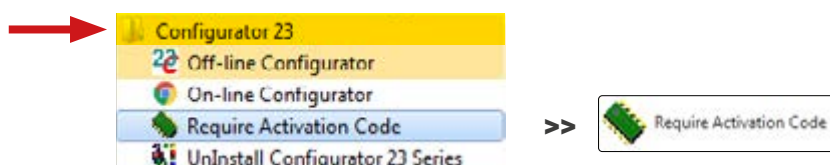

4. The following window will open:

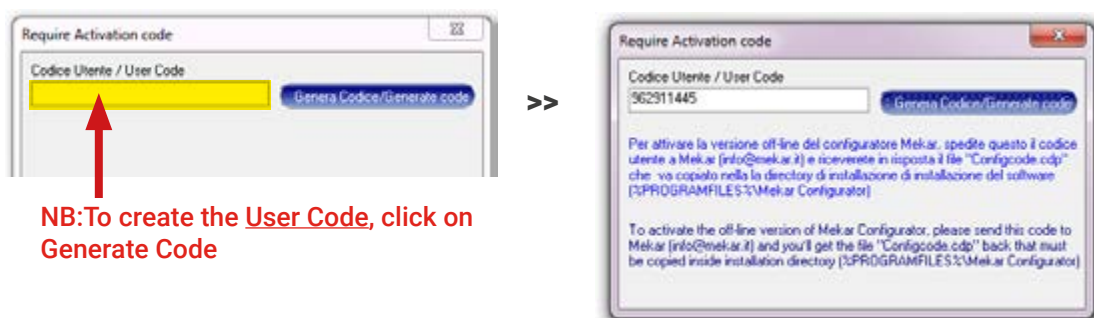

5. After this, return to the site [www.mekar.it](http://www.mekar.it)  
> **Support** > **Software** and fill in all the fields on the button:  
"**REQUEST ACTIVATION KEYS**", by entering the number previously generated by the Require Activation code in the "serial number" entry.

 6. In a short time, Mekar will provide the Activation Code to the email address communicated.



**NB: To activate the off-line version of the Mekar configurator, save the file received in response, "Configcode.cdp" inside: %PROGRAMFILES% \ Mekar Configurator and insert it in the activation code via "Browse"**



7. The Configurator is now ready to be used