

The image shows a row of industrial air handling units (AHUs) in a light teal color. Each unit has a large circular fan visible through a glass-paned door. The units are mounted on a white base with yellow and black safety markings. A large, semi-transparent circular graphic with a stylized leaf-like pattern is overlaid in the center of the image.


MEKAR[®]
AIR HANDLING UNITS

Installazione Software

1. Scegliere una categoria ed eseguire il download del software dedicato.




2. Eseguito il punto precedente, installare il file scaricato seguendo la procedura. Si aprirà la seguente finestra. A completamento della barra premere Finish.

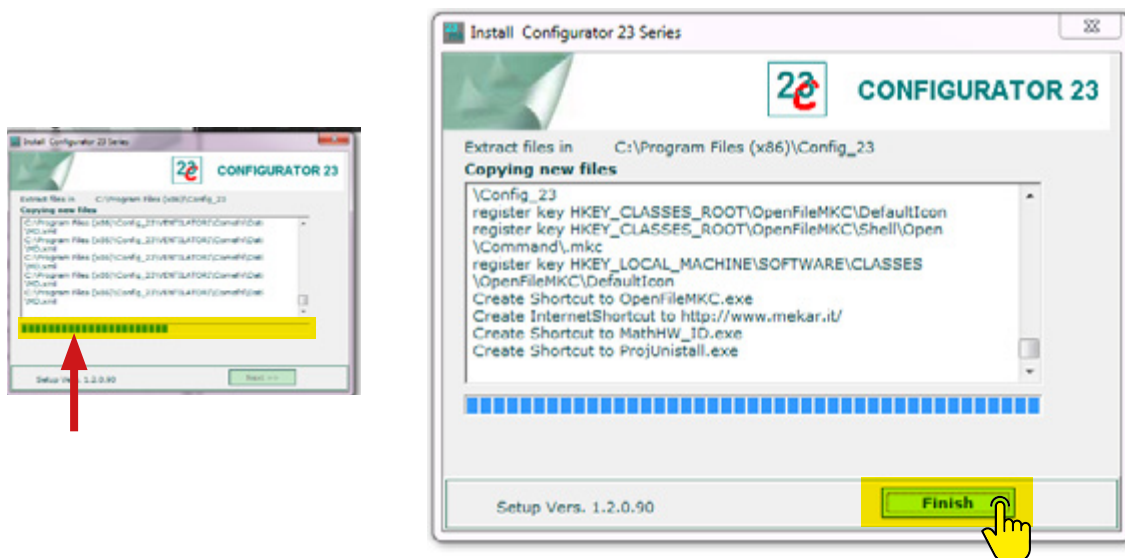


3. Ad installazione ultimata tramite il menu avvio di windows > programmi > (cartella) **Configurator 23** > cliccare sulla voce



“Require Activation code” .

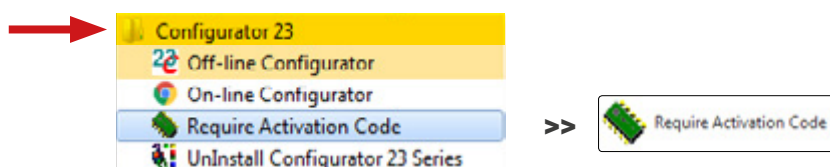


4. Si aprirà la seguente finestra:

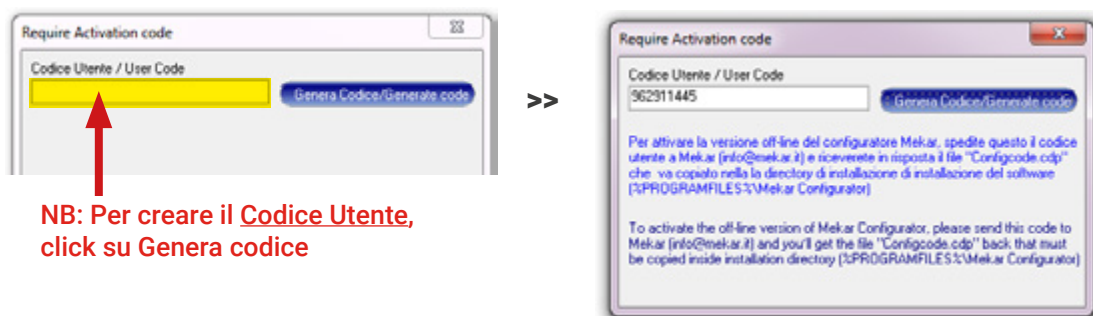

5. Fatto questo, ritornare nel sito www.mekar.it
> **Supporto** > **Software** e compilare tutti i campi del bottone:
"RICHIESTA CHIAVI DI ATTIVAZIONE",
inserendo nella voce: "numero seriale" il numero generato
precedentemente dal Require Activation code.

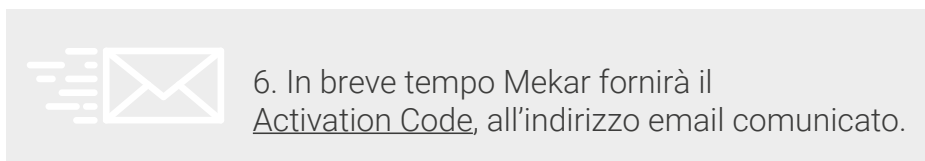

NB: Per attivare la versione off-line del configuratore Mekar, salvare il file ricevuto in risposta "Configcode.cdp" all'interno: %PROGRAMFILES%\Mekar Configurator ed inserirlo nell' activation code tramite "Browse"

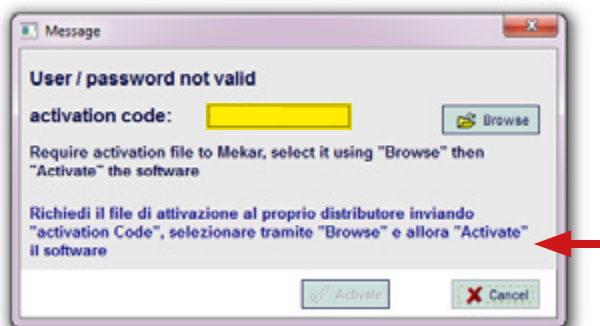

7. Il Configuratore ora è pronto per esser utilizzato